

1. Example of Product




Model: 360102-OMG-0001


2. Dimension and Configuration

Radome	Fiberglass
Color	Standard green with white spot. Customized
Configurations	Mushroom decorative antenna and M6 anchor bolt
Radiation Type	Omni-directional
Connector	Cable
Dimensions	$\Phi 350 \times 410 \text{mm}$ the details are in the figure below.

3. Dimensions of diagram

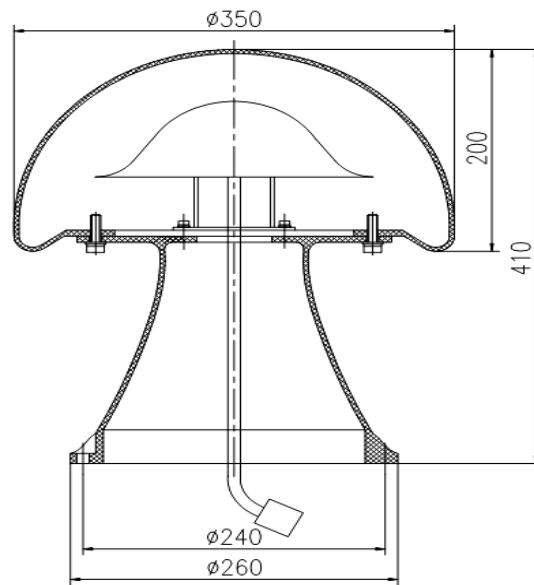

4. Installation Steps

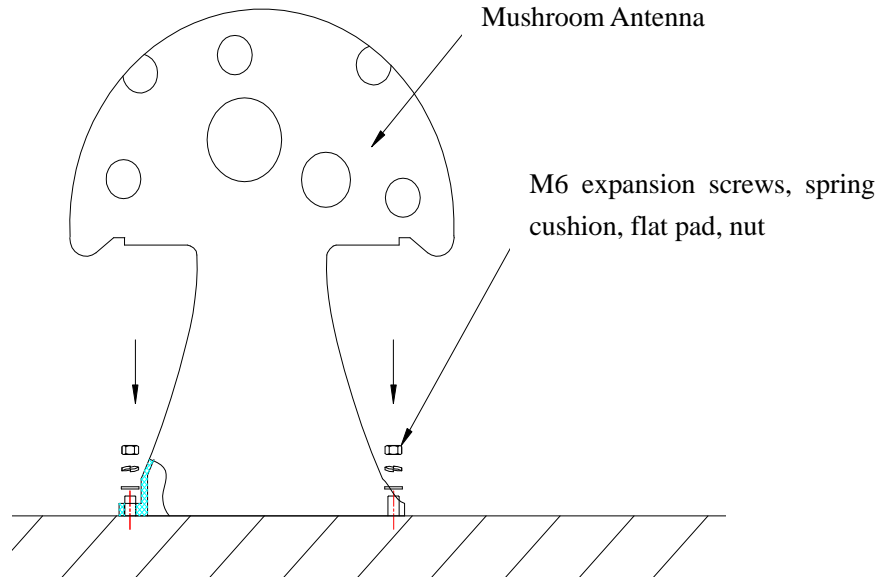

1. Embed M6 anchor bolt in the ground according to the whole site of pedestal of mushroom antenna.
 2. Install M6 nut, flat washer, spring washer, and then fasten the mushroom antenna on the ground.
- Note: In order to avoid damaging the cable, much attention should be paid to it when installing.