

9.1 Example of Product




Model: 360101-0LD-0206


9.2 Dimensions and Configurations

Radome Material	Fiberglass ϕ 76*1900mm
Standard color	Black polished
Lighting	Light can be on
Configurations	Lamp cap: LD-0206 Dimensions of antenna pole: ϕ 76*1900mm Regular pedestal: ϕ 114*850 with stone bolt
Elevation angle	10°~20°
Connector Type	Cable out
Dimensions	Total height: 2.76m. The detailed dimensions is as follow :

9.3 Dimensions of diagram

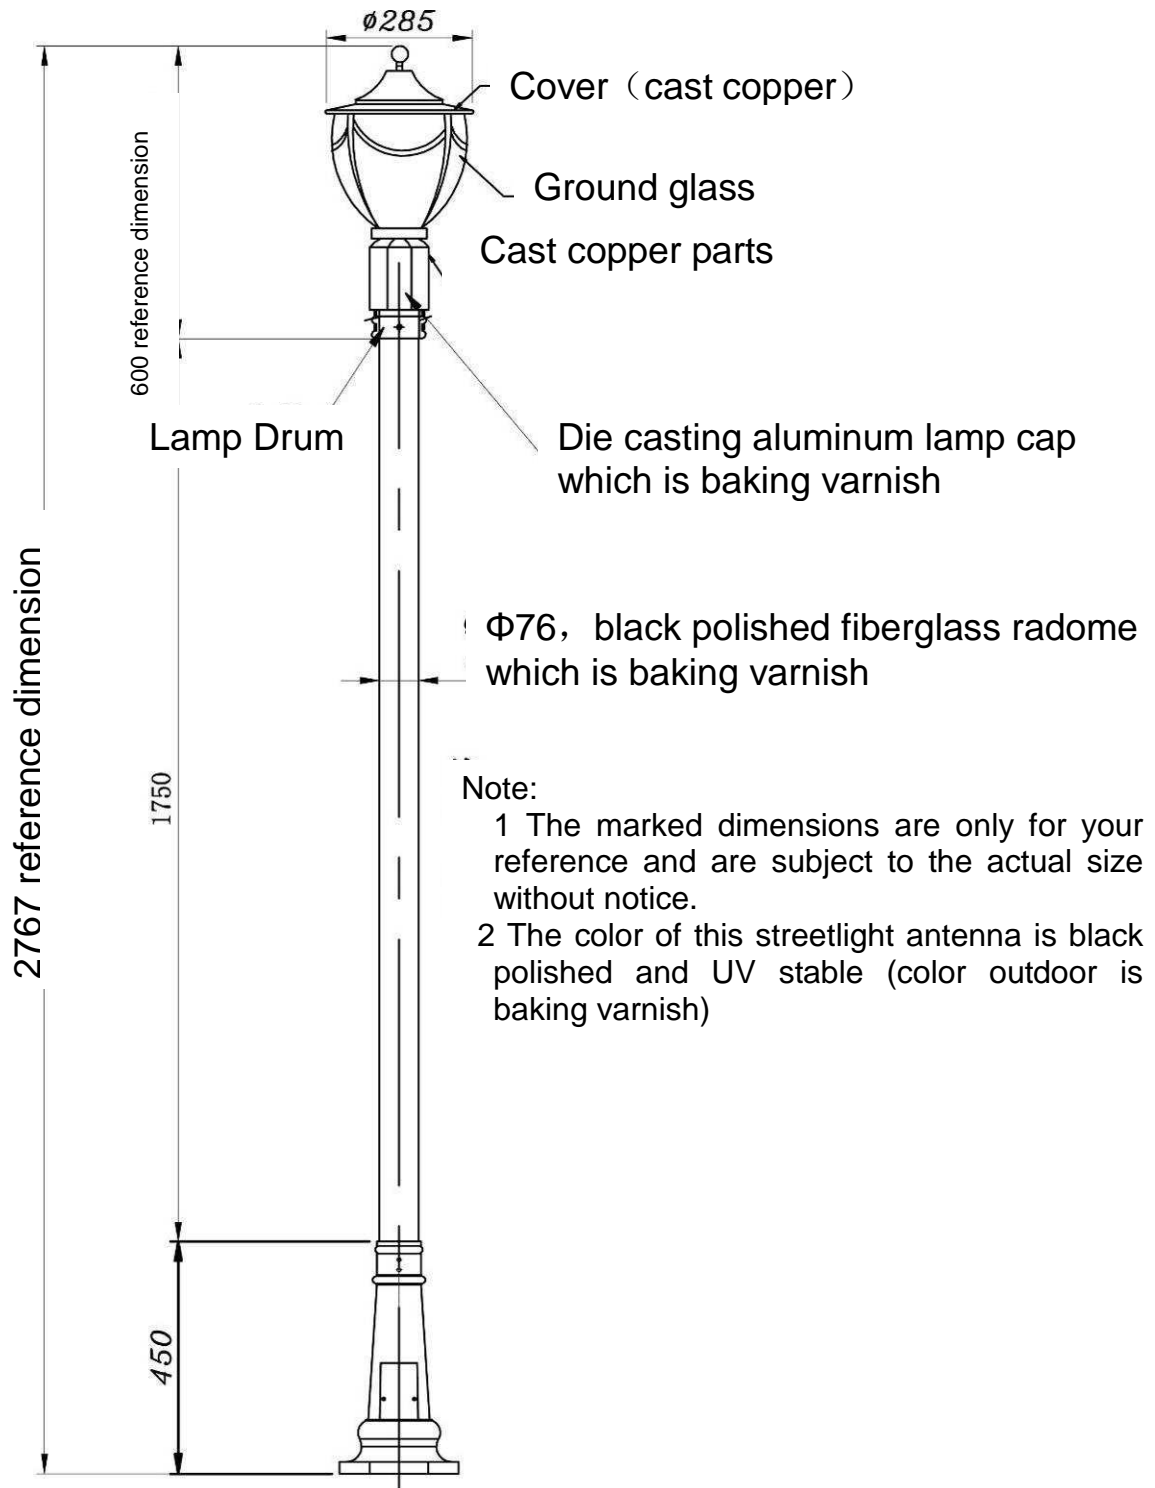

9.4 Installation Steps

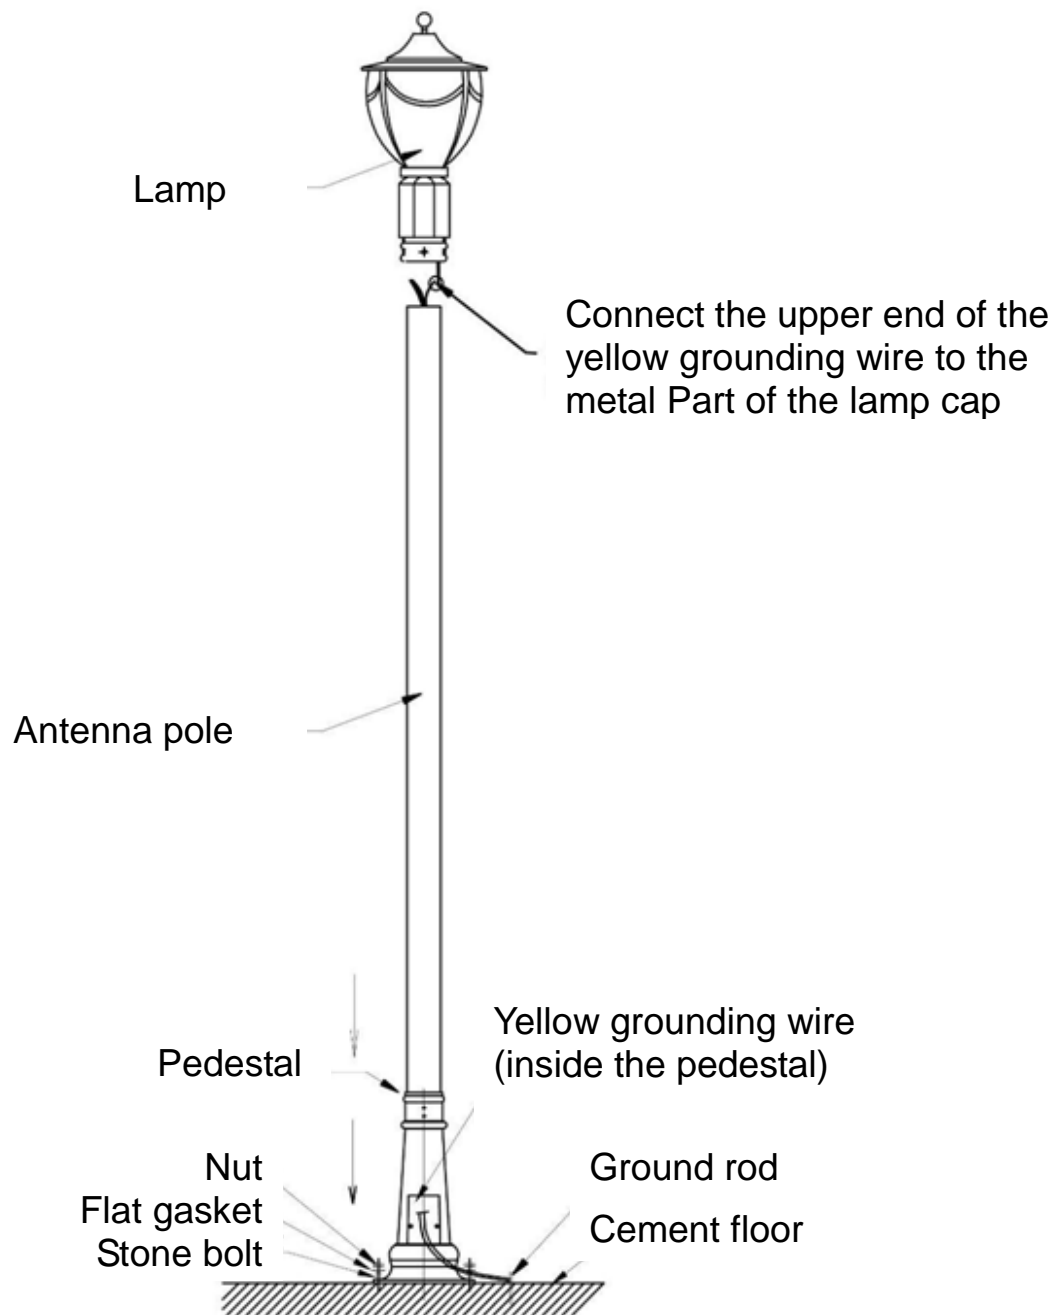

- ① Insert the antenna pole into the pedestal and fasten them with screw after making sure the connection is tight and straight.
- ② Screw the energy-saving lamp into the ceramic pedestal
- ③ Connect the yellow wire of the lampshade to the upper end of yellow grounding wire, the rest two wires are power wires
- ④ Insert the antenna pole into the lampshade and fasten them with screw after making sure the connection is tight and straight.
- ⑤ Install the assembled streetlight on the cement and fasten with stone bolt, nut and flat washer.
- ⑥ It is suggested that the lower end of grounding wire be connected to the ground rod.