

1. Example of Product




Model: 360103-OJS-0001

2. Dimensions and Configurations

Radome	Fiberglass
Color	Imitation stone
Configurations	Mountain decorative antenna and M6 anchor bolt
Radiation Type	Omni-directional
Connector	Cable
Dimensions	Φ560*600mm

3. Installation Steps

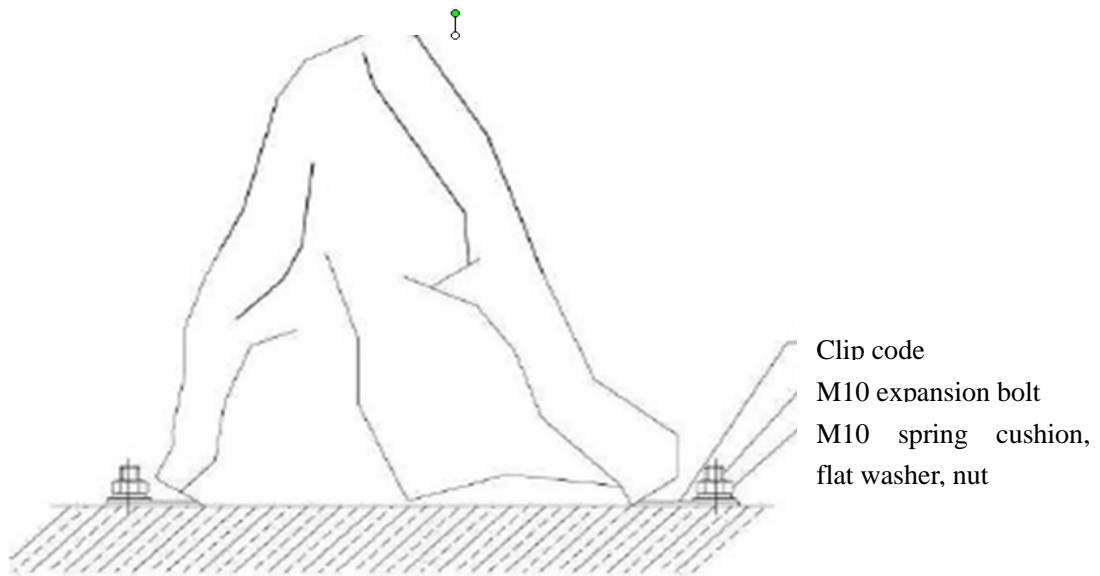

Procedure of Installation

- ① Aim at the mould clamps and setscrew
- ② Fasten the nut and setscrew.

Note: the radiation direction is according to the arrowhead.