# 5.1 Example of Product




Model: 360101-0LD-00031

# 5.2 Dimension and Configuration

| Radome Material | Fiberglass  |
|-----------------|---|
| Standard color  | Black polished  |
| Lighting        | Light can be on   |
| Configurations  | Lamp cap: LD-0031 Dimensions of antenna pole: Φ76*1900mm Regular pedestal: Φ114*850mm with stone bolt |
| Elevation angle | 10° ~20°  |
| Connector Type  | With cable  |
| Dimensions      | The detailed size is as follow:   |

### 5.3 Dimensions of diagram

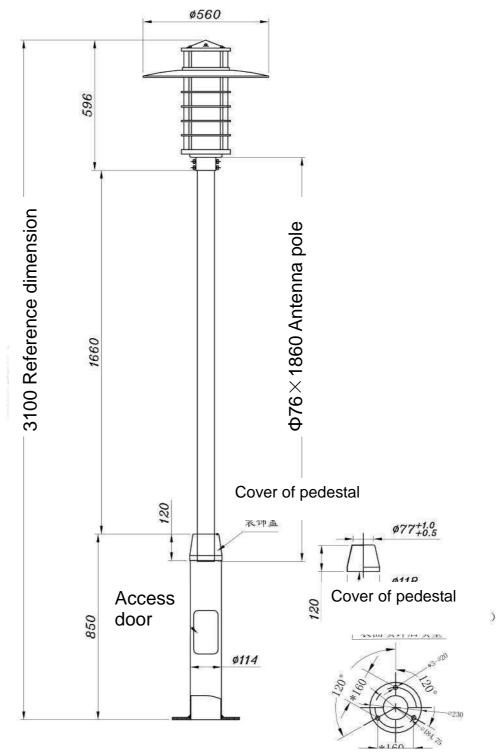


#### Note:

1The marked dimensions are only for your reference and is subject to the actual size without notice.

2 The color of streetlight is black polished (color outdoor is baking varnish)

Flange of pedestal

### 5.4 Installation Steps

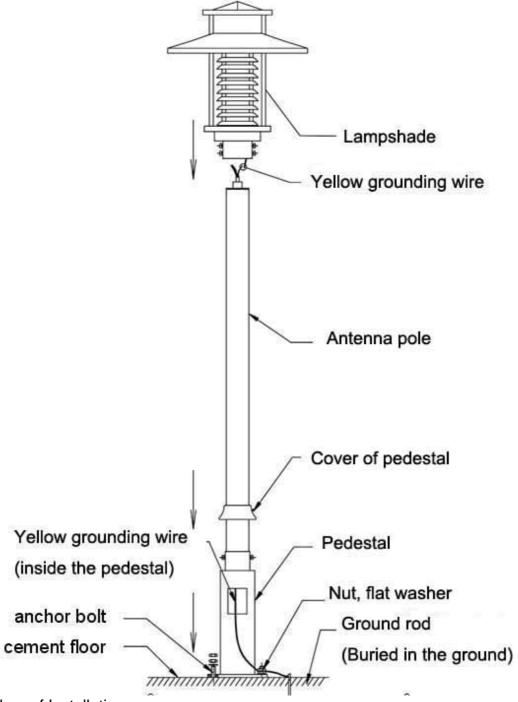

#### Procedure of Installation

- ① Connect the pedestal with the pole and lock with the screw
- 2 Cover with the pedestal lid and lock the with screw
- 3 Connect the yellow wire in the lampshade to yellow grounding wire on the top of pole, the other two are power wires.
- 4 Connect the lampshade to the pole and lock with screw
- ⑤ Install the whole street lamp on the cement floor with M16 stone bolt and then lock with flat washer&nut.
- ⑥ It is suggested that connect the grounding wire to the grounding rod